

• **NASTAVENÍ**

• **ADJUSTMENT INSTRUCTION**

• **EINSTELLUNGSANLEITUNG**

$$q_v = k \times \sqrt{\Delta p_m}$$

$$q_v = l/s$$

$$\Delta p_m = Pa$$

LINO		k	
		100	125
		14*31	14*31
Suljettu riviä Stängda rad Closed rows	0	4,2	4,2
	2	3,6	3,6
	4	3,0	3,0
	6	2,2	2,2
	8	1,6	1,6
	10	1,1	1,1
	12	0,5	0,5

LINO-W		k	
		100	125
		14*31	14*31
Suljettu riviä Stängda rad Closed rows	0	4,0	4,0
	2	3,4	3,4
	4	2,9	2,9
	6	2,2	2,2
	8	1,6	1,6
	10	1,1	1,1
	12	0,5	0,5

