
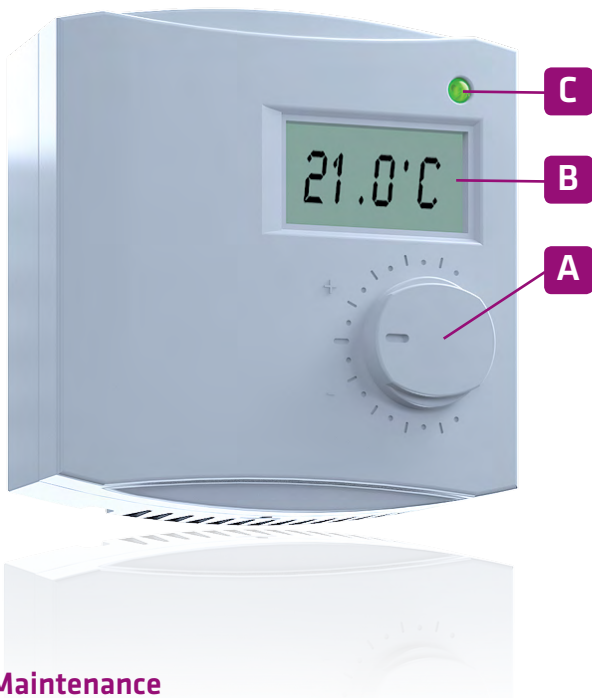


User manual ECO

ECO forced-air heaters control the room temperature. The system includes a supply air diffusers (1-3/controller), the thermostat and in some cases the absence switch. In general, every room has its own system.

The thermostat measures the room temperature and based on it, controls the heating coil in the supply air device.

The default focal point of the temperature control range (+/- 3°C) of the system is 21°C. You can adjust the temperature set value in the range of 18-24°C using the temperature control knob A.

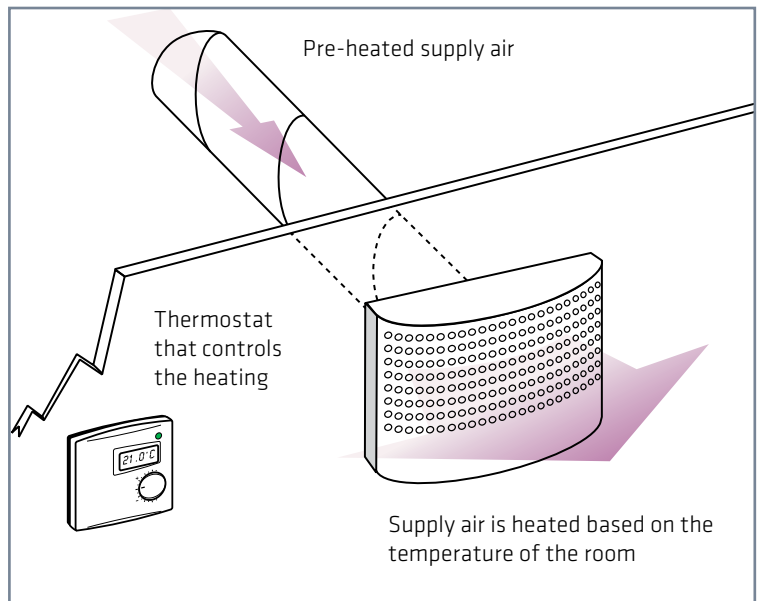

When you turn the thermostat control knob, a new set value will be displayed briefly on the screen B. Normally, the display shows the room temperature.

LED C indicates the operation of the heating coil:
Green light = the heating is switched off
Red light = the heating is on

With the absence switch, you can drop the room temperature set value to 3°C lower, e.g., when the premises are empty.

Maintenance

NOTE! Disconnect the system from the power supply at all times during maintenance. You can wipe the dust off the outer surface of the air supply unit if necessary. Do not use a wet cloth, because the inner side has electrical parts.

WARNING!

There is 230V voltage inside the supply air diffuser. Do not insert anything into it. Do not let children touch the product. Children should be informed of the danger of electric shock. The supply air diffuser must be opened only by trained personnel that are sufficiently familiar with the device.

