


RINO, RINO-S, RINOi


Pokyny k instalaci

Installation / Montage

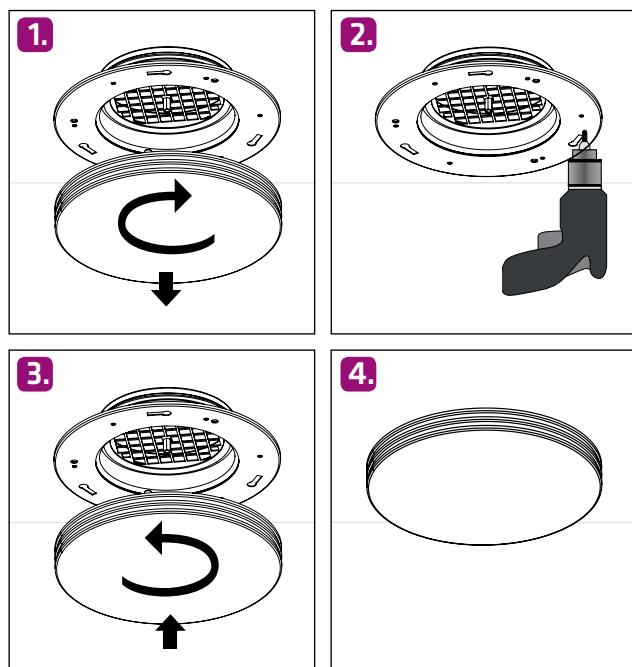


Údržba

Maintenance / Wartung

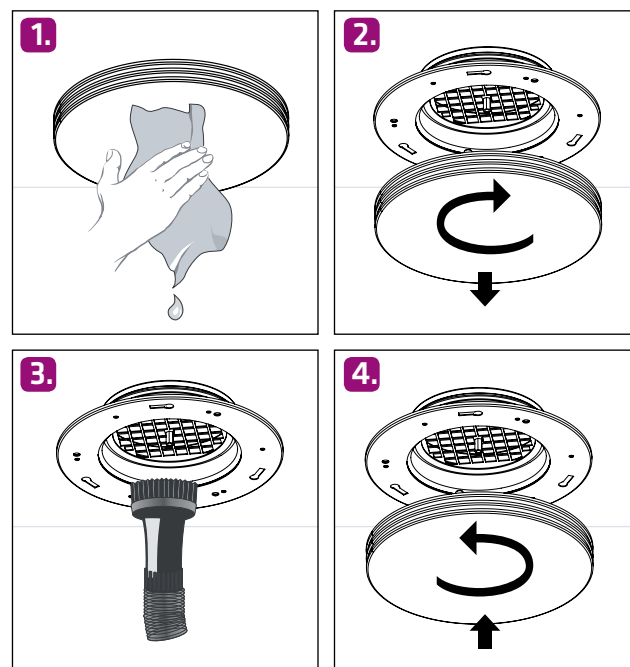

Nastavení

Adjustment / Einstellung

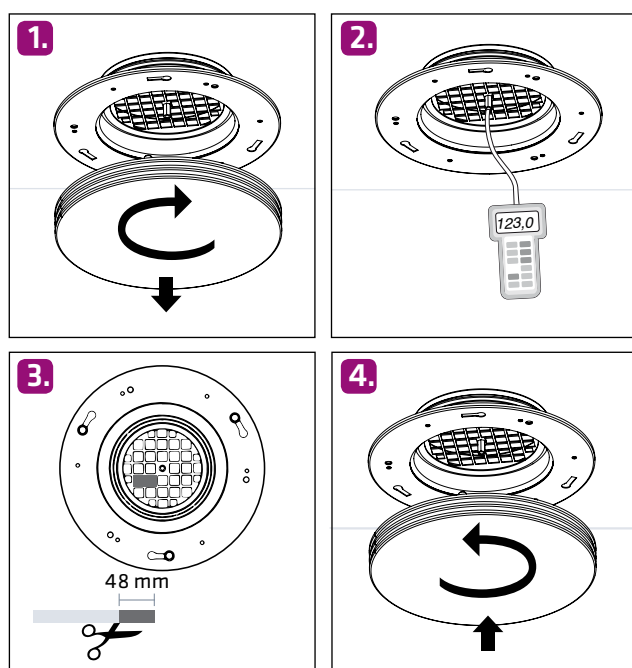

$$q_v = k \times v \sqrt{\Delta P_m}$$

		k					
		RINO					
Säätönauhaa kpl / Injusteringsband st / Adjustment tape pcs (1 = 4 reikää / hål / holes = 48mm)		100	125	160	100-S	100i	125i
	0	3,14	4,48	7,60	1,77	3,40	4,90
	1	2,73	4,05	7,10	1,43	2,89	4,55
	2	2,31	3,70	6,70	1,05	2,52	4,10
	3	1,96	3,41	6,30		2,14	3,80
	4	1,59	3,04	5,84		1,78	3,40
	5	1,24	2,72	5,50		1,44	3,04
	6		2,44	5,13			2,68
	7		2,05	4,80			2,38
	8		1,73	4,40			1,96
	9			4,30			
	10			3,80			
	11			3,40			
	12			3,10			
	13			2,70			
	14			2,40			
	15			2,10			

RINO, RINO-S, RINOi

Nastavení vzoru

Adjustment of the throw pattern / Einstellung des Wurfmusters

